

REPLACEMENT CAP FOR POWERCAP ACTIVE™



REMOVING THE CAP



1. Remove the filters from both sides of the cap by screwing them anti-clockwise, away from the motor.




2. Disconnect the wire at the back of the cap and slide the cable through the sleeve on the side of the cap.



3. Remove the battery from the back of the cap by holding and sliding it upwards.



4. Make sure that you remove the visor's inner lining away from the velcro.

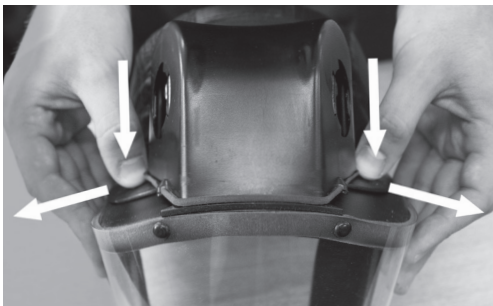

5. With the peak of the cap facing away from you, place your thumbs on either side of the cap's motor by the raised edges (as located by the two arrows), then press down and outwards, allowing the visor to slide away from the cap.



6. Finally, remove the hard liner by unfolding the cap's inner lining and pushing up from the base of the cap.


REPLACING THE CAP



1. Put the liner inside the new cap, ensuring that the main gap in the liner's rim is at the back.



2. Holding the wire from the motor clear of the cap, slide the cap's peak between the motor and the visor back into position until you hear a 'click'.

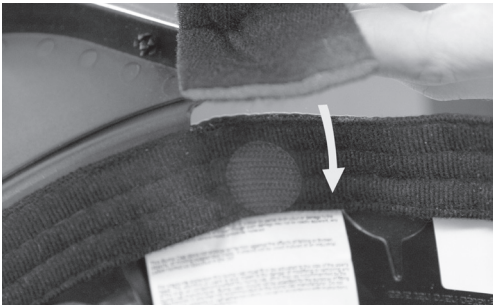


3. Reattach the visor's inner lining to the velcro.



4. Replace the battery onto the back of the cap by holding and sliding it downwards.



5. Rethread the wire through the sleeve on the side of the cap, then re-connect the wire to the battery.

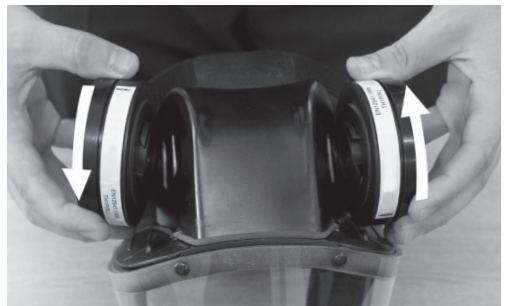

6. Finally, reattach the filters by screwing them clockwise back into the two holes on either side.

www.jspsafety.com

RFPZ-900-400-20-03



JSP Safety GmbH | JSP Ltd.
40549_DE | QX29 0TA_UK



Certified by: BSI Group
The Netherlands B.V., (NB2797),
BSI Group The Netherlands, B.V.,
John M. Keynesplein 9, 1066 EP,
Amsterdam, Netherlands.

Copyright © 2014-2020. JSP Ltd. All Rights Reserved.