




Certified by: BSI Group The Netherlands B.V., (NB2797).
BSI Group The Netherlands B.V., John M. Keynesplein 9,
1066 EP, Amsterdam, The Netherlands.

EN

A copy of this manual and the Declaration of Conformity for the product can be found on the product page: documents.jspsafety.com

FITTING INSTRUCTIONS

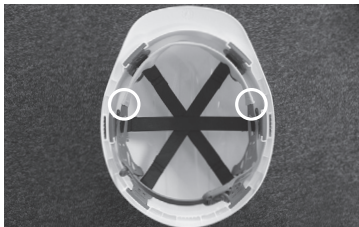


1. The chinstrap should be fitted to the inner harness towards the front of the helmet.



2. First, pull back the sweatband on the helmet harness to leave a clear hole to fit the chinstrap.



3. Next, thread the chinstrap pin through the hole, making sure that the pin is facing the shell of the helmet.

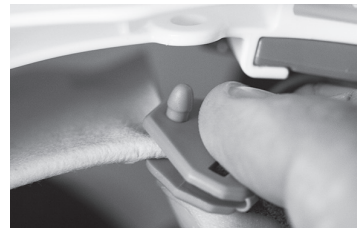

4. Then align the top of the chinstrap clasp over the pin and press down firmly to close the clasp.



5. The first side of the chinstrap should now be firmly in place.



6. Repeat this process with the clasp at the other end of the chinstrap. Make sure that the chinstrap itself is not twisted.